

# LENLOK GATE CLOSER INSTALLATION INSTRUCTIONS

Maximum Gate Weight 54kg  
Maximum Gate Width 1000mm

- The closer can be fitted to the top, middle or bottom of the gate on the "pull" side only.
- The gate face must be flush with the gatepost face and hinged as close as possible to the post.
- The pivot point of the closer must be in line with the pivot point of the hinges. It may be necessary to fabricate a bracket to allow the closer to be fitted correctly.
- The gate must swing freely on the hinges prior to fixing the closer and hinges regularly greased.
- The guide roller must be fitted and it may be necessary to fabricate a bracket to receive the roller.
- **The gate must not be allowed to open more than 90 degrees and a ground stop must be fitted if required.**
- The holding pin (See fig. 4) must not be removed until the closer is fitted.

